NOXWELL
BATHROOM COLLECTION

BVWH-6045C

VANITY

MODEL INFORMATION

Model Number	BVWH-6045C

MATERIAL & FINISH

Material	Multi-layer Plywood
Color / Finish	White

SIZE & DIMENSIONS

Overall Size	605mm (W) x 460mm (D) x 850mm (H)
Basin Size	605mm (W) x 460mm (D)
Basin Depth	120mm
Cabinet Height	535mm
Leg Height	150mm
Shelf	1 Adjustable Shelf
Tap Hole	Ø35mm
Overflow	Yes

TECHNICAL INFORMATION

Mounting Type	Floor Standing
Assembly	Self Assembly Required
Number of Doors	2
Number of Shelves	1
Feature	Soft Close Hinges

Please allow a tolerance of ±5mm for all dimensions.

DIAGRAM

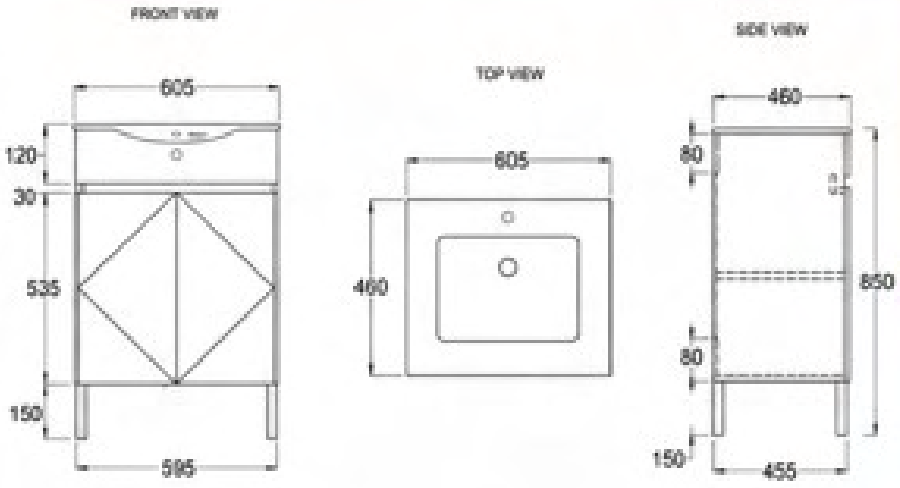

PREMIUM QUALITY
Made from high quality multi-layer plywood for durability and stability.

SOFT CLOSE HINGES
Ensures quiet and smooth closing of doors.

CONCEALED HANDLE
Modern concealed handle design for a clean and sleek look.

* All dimensions are in millimetres (mm).
* Product images are for illustration purposes only. Actual colour may vary slightly.

INSTALLATION DETAIL DRAWING

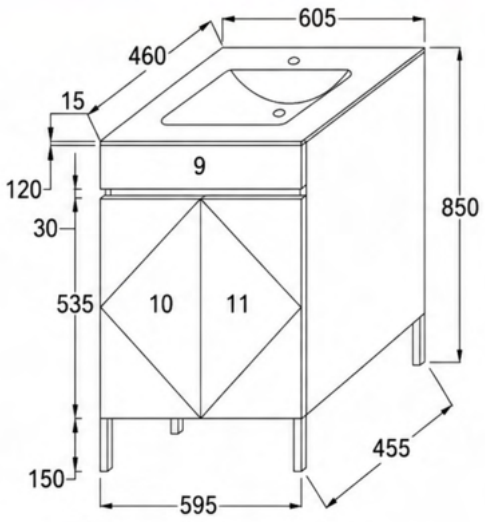

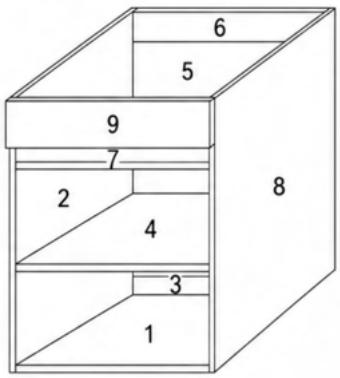

NOTES

1	Bottom Panel	5	Back Panel	9	Front Decorative Panel
2	Left Side Panel	6	Upper Back Support Strip	10	Left Door Panel
3	Lower Back Support Strip	7	Handle Cover Panel	11	Right Door Panel
4	Middle Shelf Panel	8	Right Side Panel		

PARTS DESCRIPTION

No.	Part Name	Specification
1	Bottom Panel	563 × 423 × 16mm
2	Left Side Panel	439 × 685 × 16mm (5mm groove included)
3	Lower Back Support Strip	563 × 80 × 16mm
4	Middle Shelf Panel	563 × 424 × 16mm
5	Back Panel	525 × 571 × 5mm (5mm thin board)
6	Upper Back Support Strip	563 × 80 × 16mm
7	Handle Cover Panel	563 × 60 × 16mm (L-shape concealed handle strip)
8	Right Side Panel	439 × 685 × 16mm (5mm groove included)
9	Front Decorative Panel	120 × 595 × 16mm
10	Left Door Panel	296.5 × 535 × 16mm (hinge holes pre-drilled, hinges included)
11	Right Door Panel	296.5 × 535 × 16mm (hinge holes pre-drilled, hinges included)

1
4
2
8
3
6
9
7
10
11
5

STEP 1 Insert the screw dowels into the pre-drilled holes and tighten them into the board.

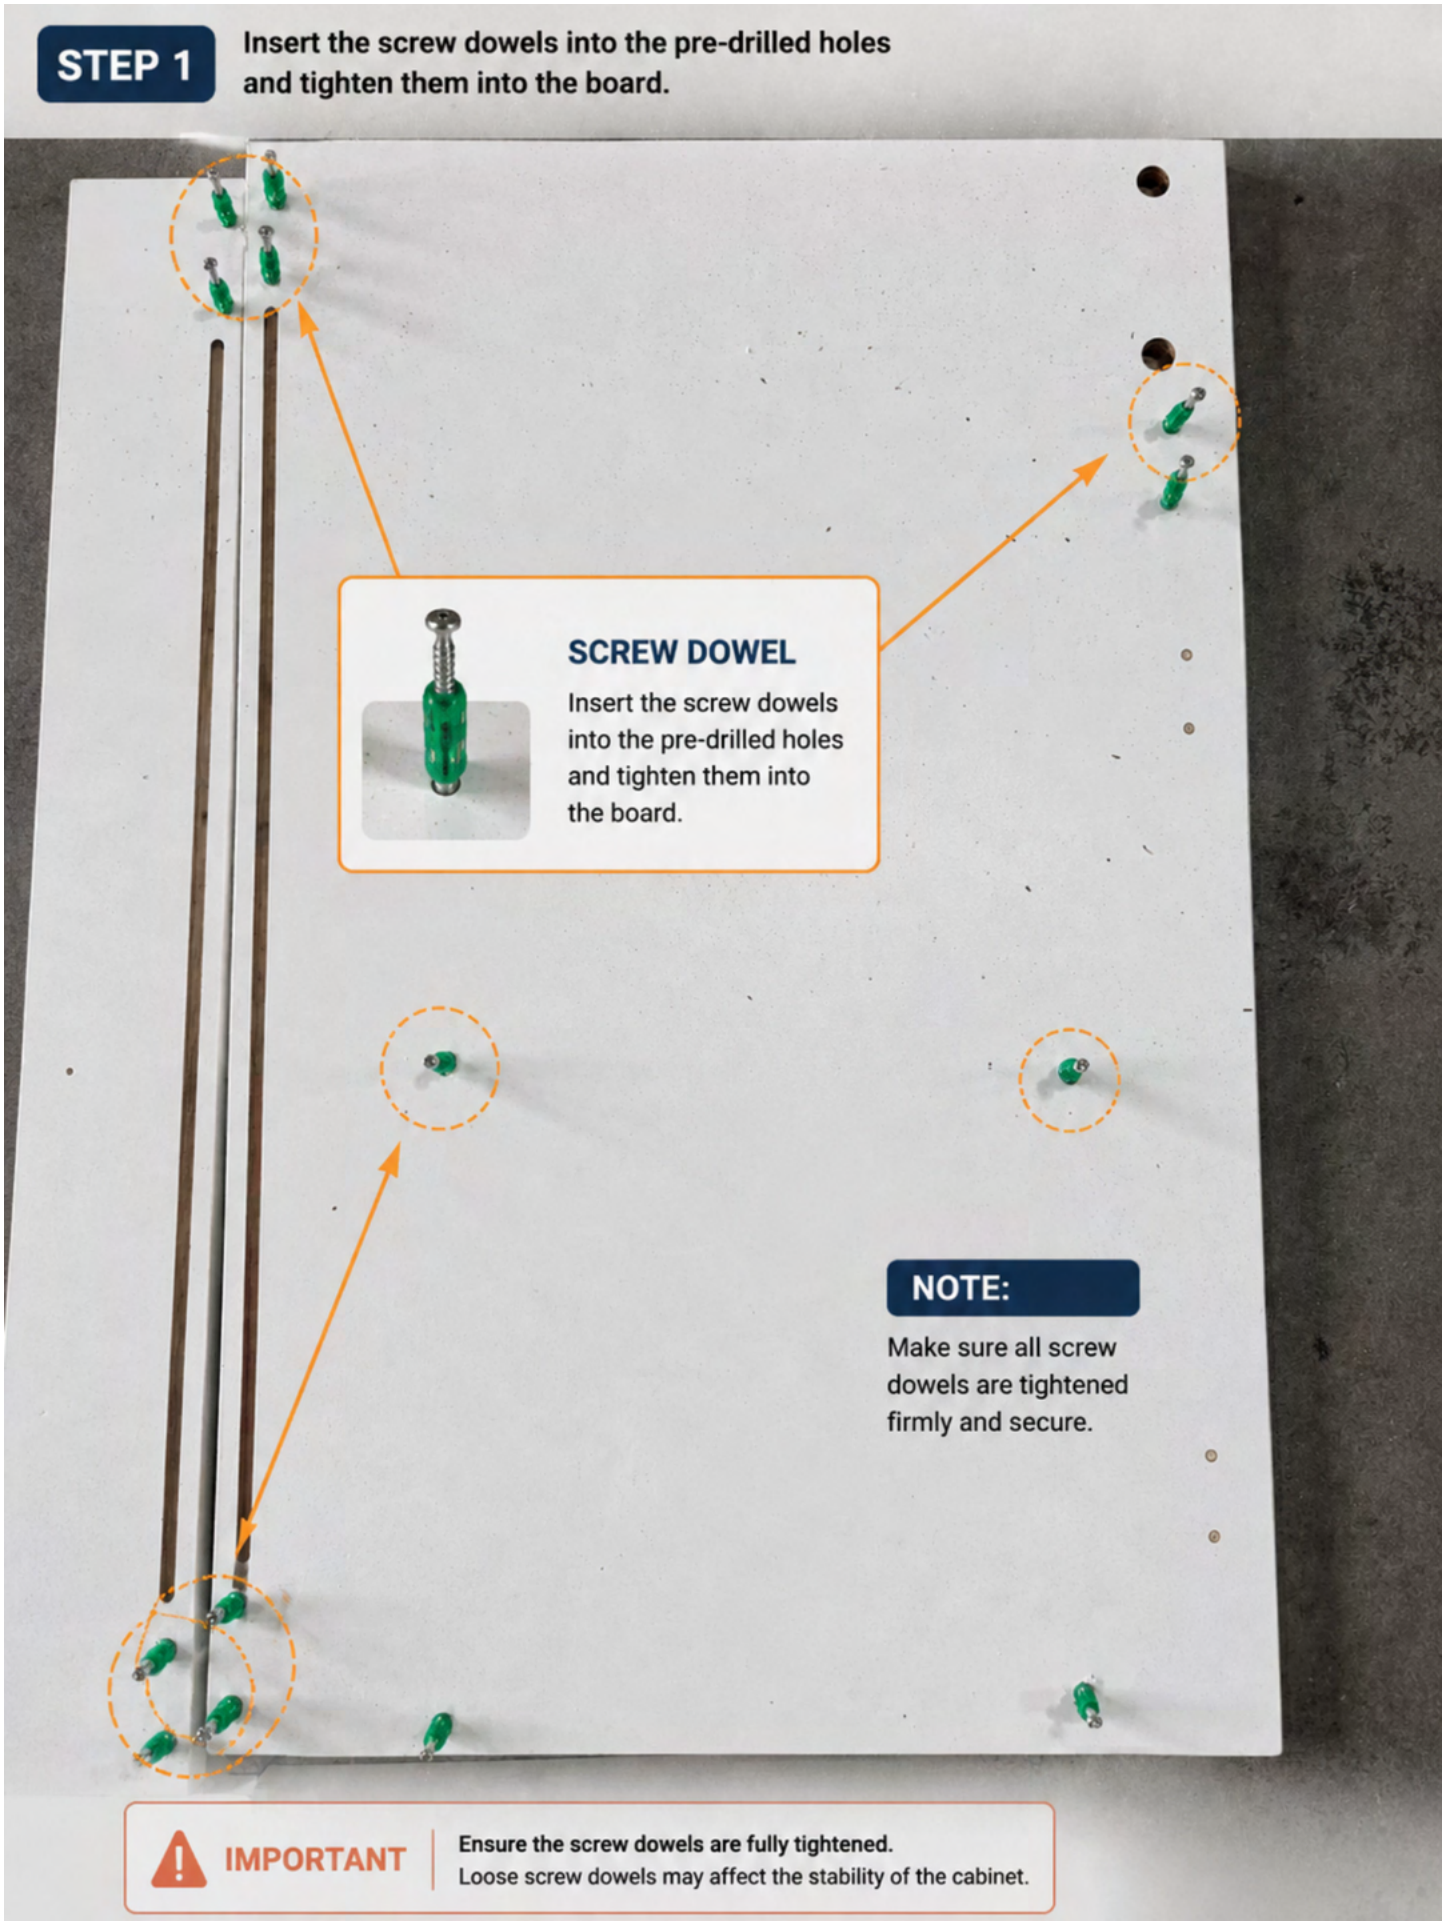

SCREW DOWEL

Insert the screw dowels into the pre-drilled holes and tighten them into the board.

NOTE:

Make sure all screw dowels are tightened firmly and secure.

IMPORTANT | **Ensure the screw dowels are fully tightened.**
Loose screw dowels may affect the stability of the cabinet.

STEP 2

Connect Part 3 (Lower Back Support Strip) with Part 1 (Bottom Panel) as shown.

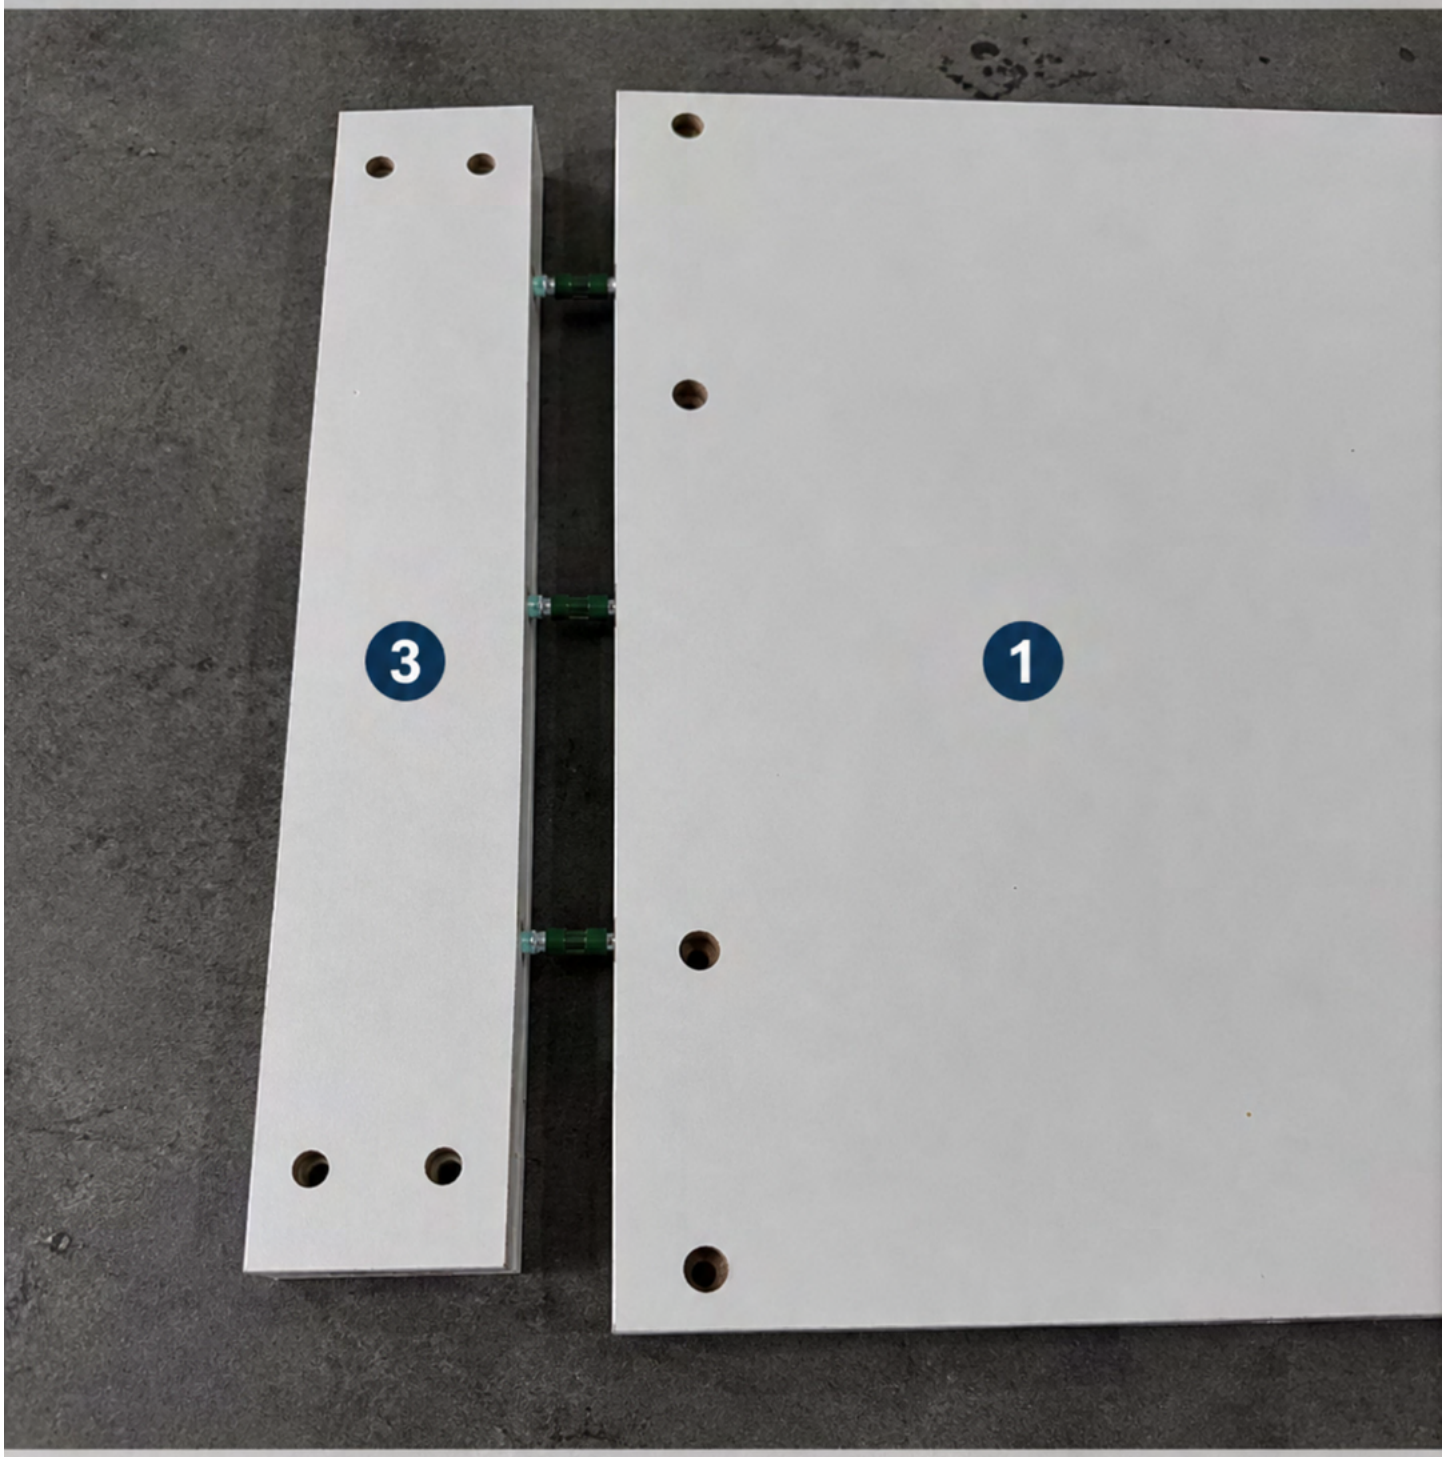

TIPS:

Make sure the screw dowels are fully inserted and the panels are tight with no gap.

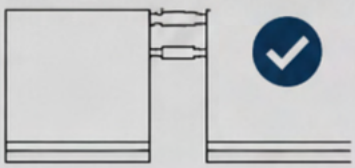

IMPORTANT:

Ensure the panels are aligned properly before tightening.

STEP 3 Connect Part 2 (Right Side Panel) with the assembled Part 1 (Bottom Panel) and Part 3 (Lower Back Support Strip) as shown.

SCREW DOWEL

Insert the screw dowels into the pre-drilled holes and tighten them into the board.

TIPS:

Make sure the screw dowels are fully inserted and the panels are tight with no gap.

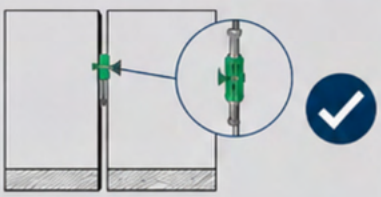

IMPORTANT:

Ensure the panels are aligned properly before tightening.

STEP 4 **Insert Part 4 (Middle Shelf Panel) into the grooves/holes as shown.**

TIPS:

Make sure the shelf panel is fully inserted into the grooves/holes and sits flat and level.

IMPORTANT:

Ensure the shelf is inserted in the correct position and is level before proceeding.

6
7

HANDMADE STAINLESS SINK
5

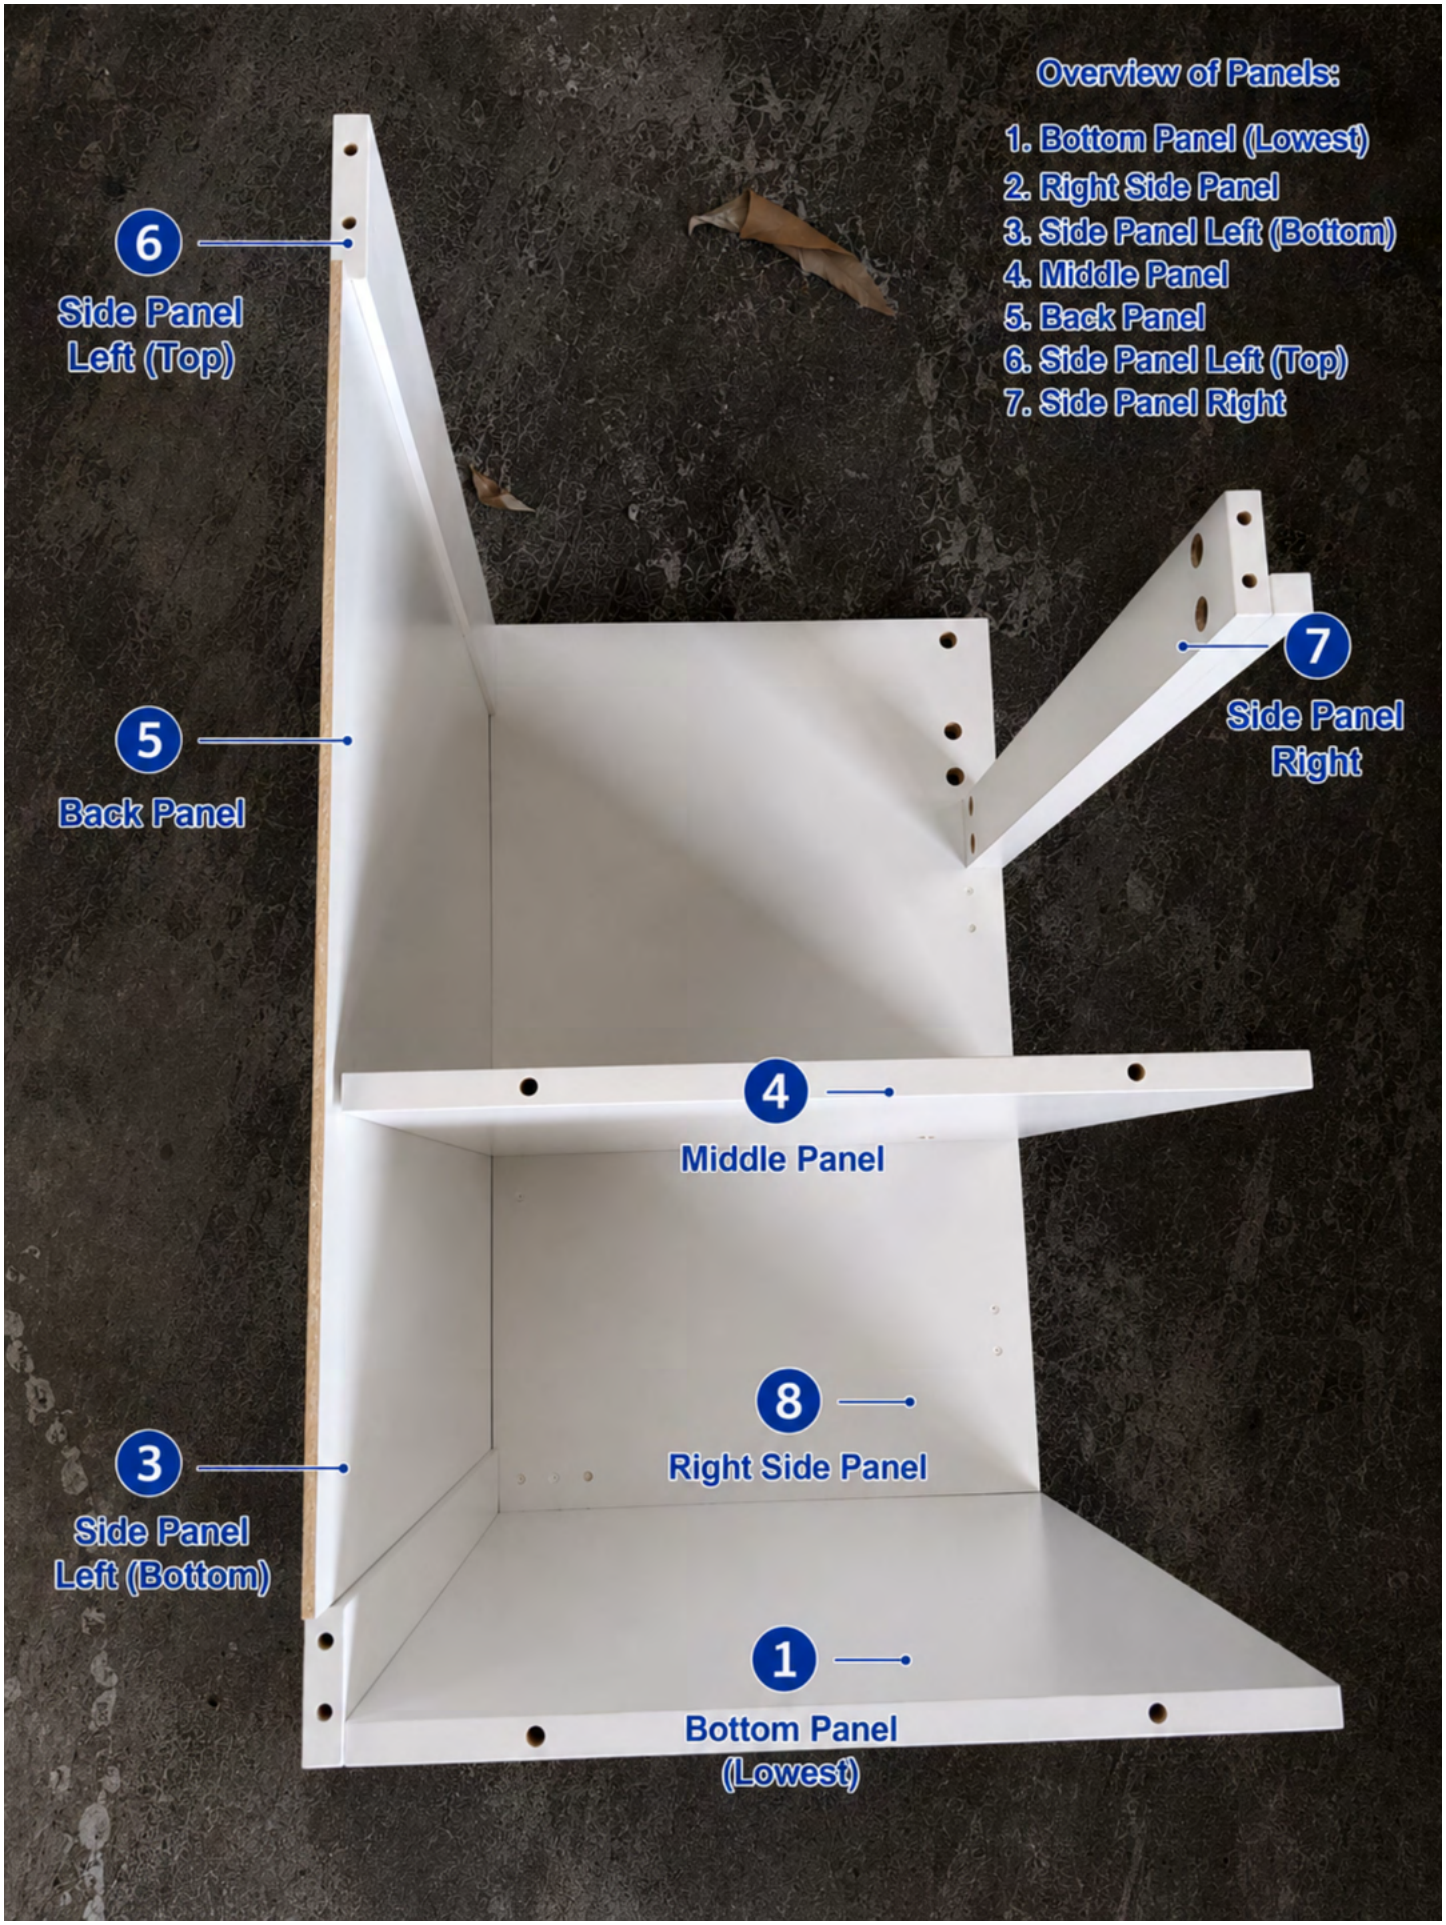
Overview of Panels:
1. Bottom Panel (Lowest)
2. Right Side Panel
3. Side Panel Left (Bottom)
4. Middle Panel
5. Back Panel
6. Side Panel Left (Top)
7. Side Panel Right
6
Side Panel Left (Top)
7
Side Panel Right
5
Back Panel
4
Middle Panel
8
Right Side Panel
3
Side Panel Left (Bottom)
1
Bottom Panel (Lowest)

2

STEP 4 Attach the door (Part 10 or 11) by securing the two hinges on the right side. Use 4 screws in total (2 screws per hinge).

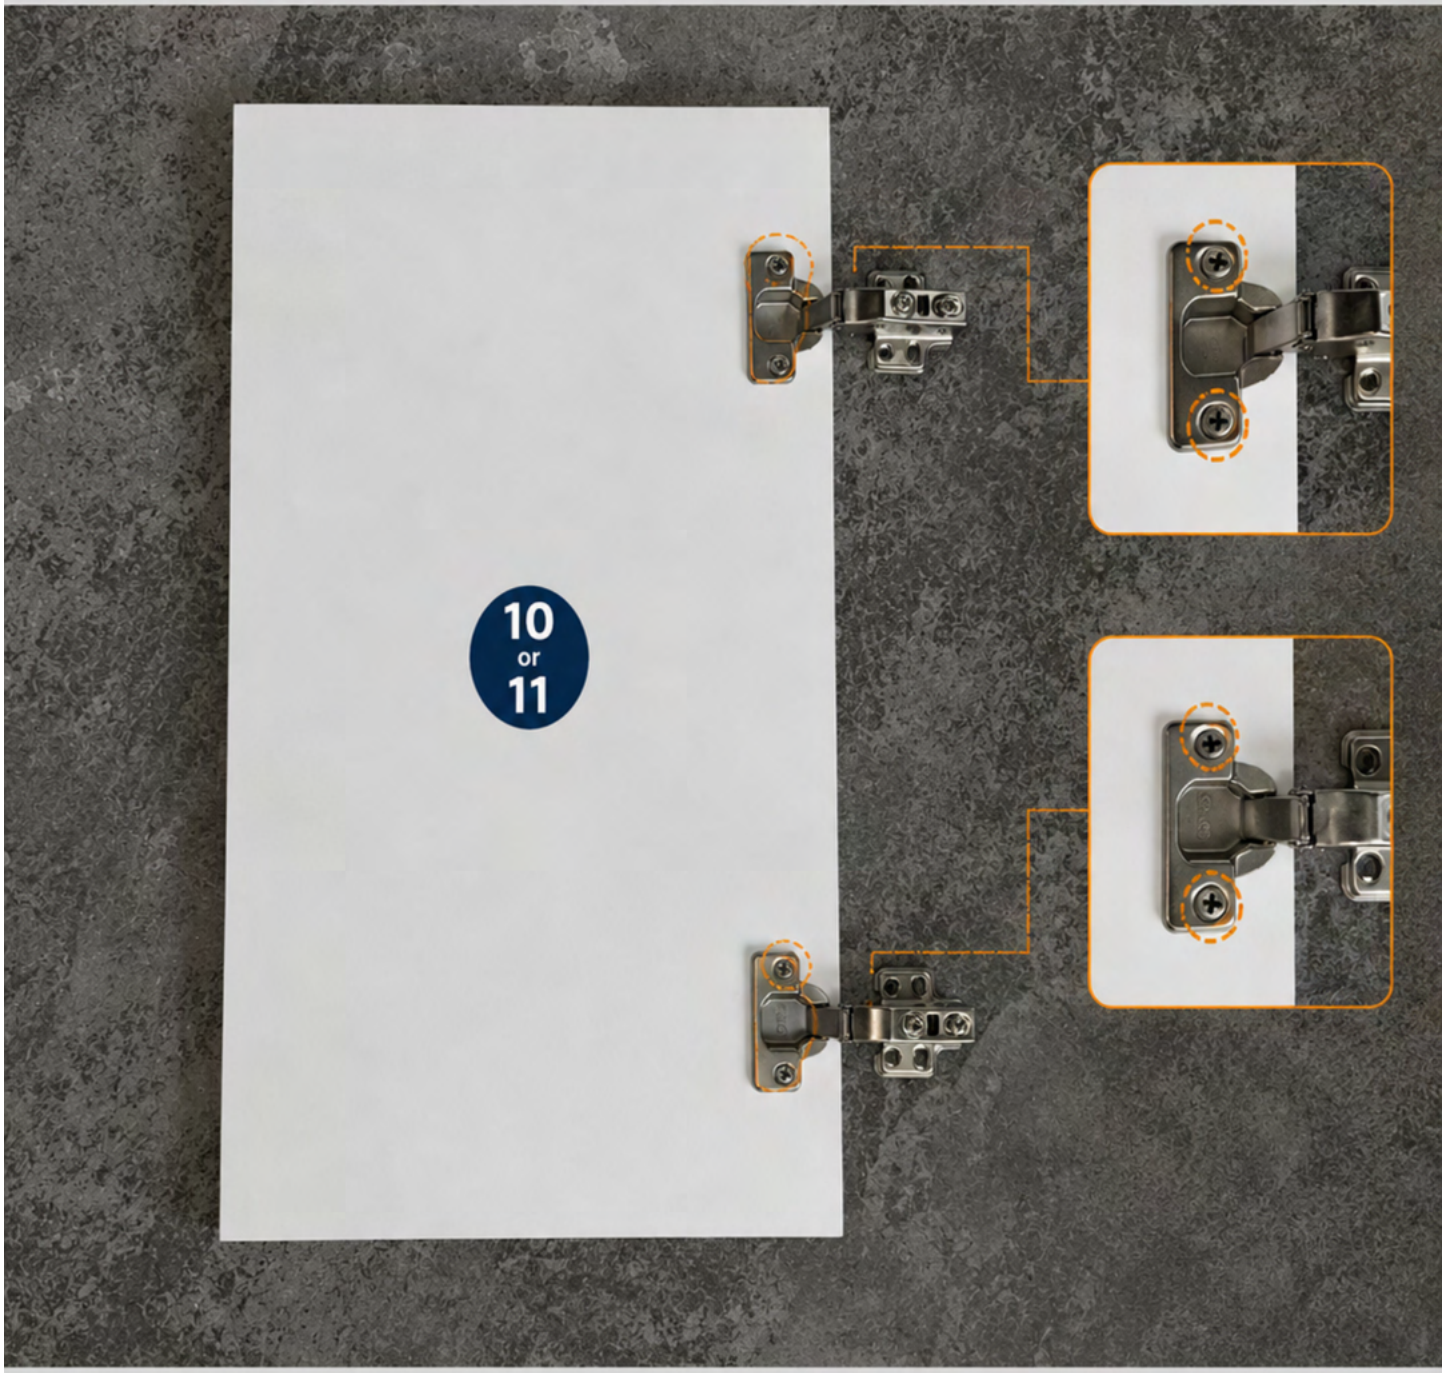

TIPS:

- Make sure the screws are tightened firmly but not over-tightened.
- Check the door alignment after installation and adjust if necessary.

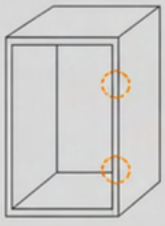

PARTS USED THIS STEP

No.	Part Name	Specification	Qty
10 or 11	Door Panel	296.5 × 535 × 16mm (Left or Right)	1
	Screw	M4 × 16mm	4

STEP 5

Attach the other side of the hinges to the pre-drilled holes on the side panel (Part 2 or 8).
Use 4 screws in total (2 screws per hinge).

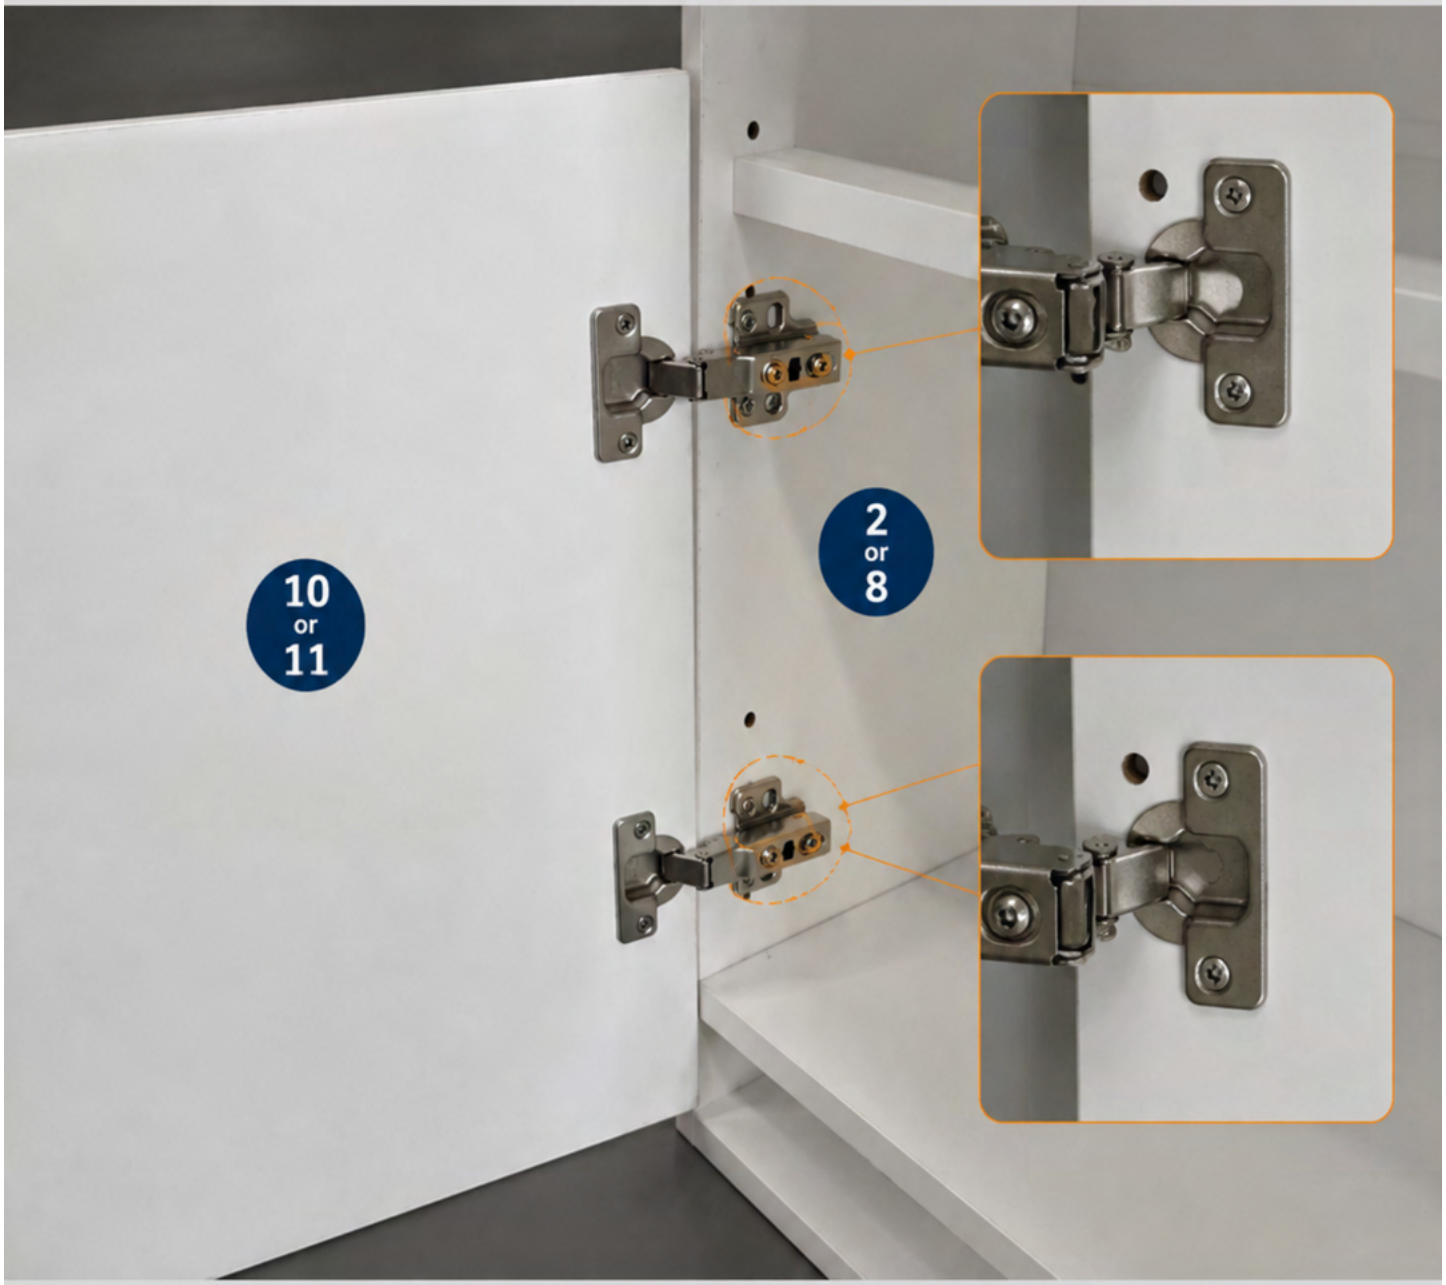

TIPS:

- Make sure the screws are tightened firmly but not over-tightened.
- Check the door alignment after installation and adjust if necessary.

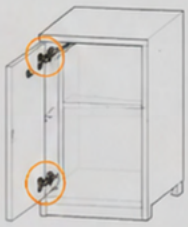

PARTS USED THIS STEP

No.	Part Name	Specification	Qty
10 or 11	Door Panel	296.5 × 535 × 16mm (Left or Right)	1
	Screw	M4 × 16mm	4

STEP 6

Turn the cabinet upside down and install the square aluminum legs at the four corners.
Use 12 screws in total (3 screws per leg).

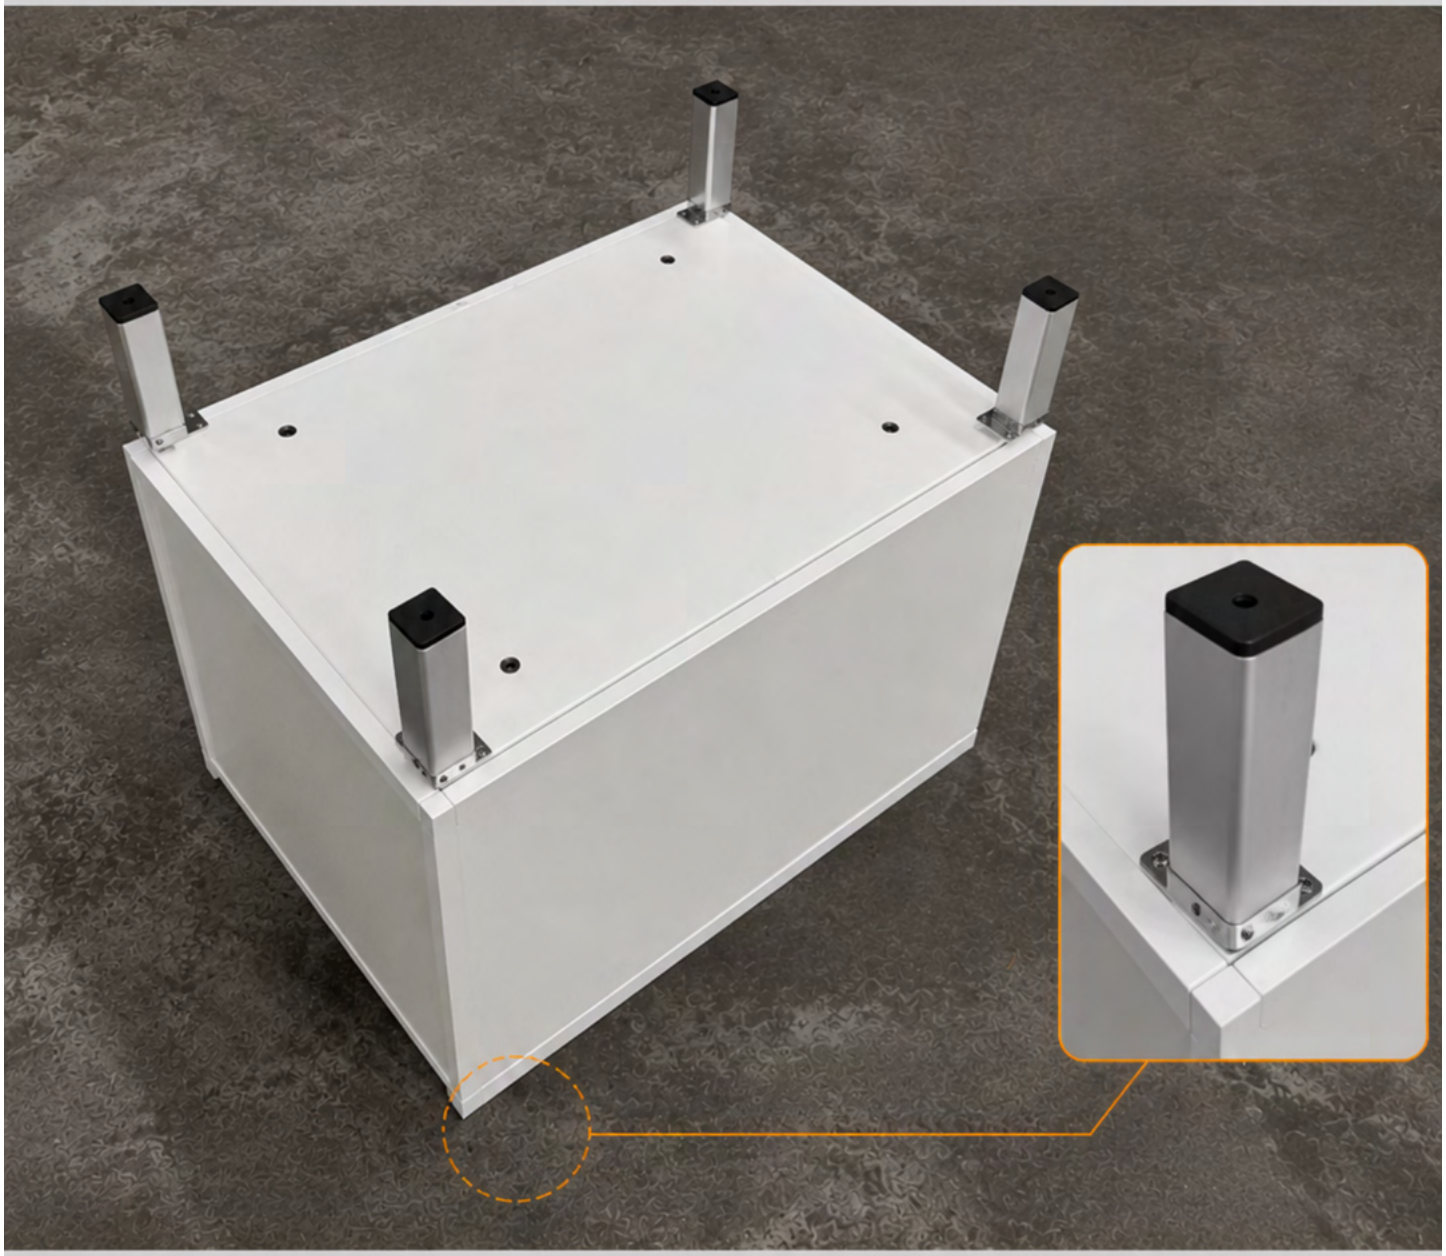

TIPS:

- Make sure the screws are tightened firmly but not over-tightened.
- Ensure the cabinet stands level and stable after installation.

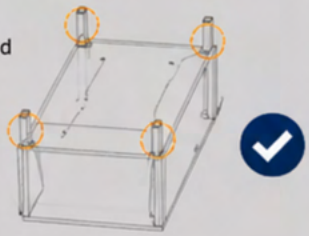

PARTS USED THIS STEP

No.	Part Name	Specification	Qty
	Square Aluminum Leg	25 × 25 × 100mm (with adjustable foot)	4
	Screw	M4 × 16mm	12